



Original	Replacement
 POWER	 Power
 TV	 TV/R
 VCR / AUX	 Shift + TV/R
 SLEEP	 Sleep
 TV / AV	 AV
 TUNER / BAND	 Smart
 DVD / CD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 ≧10 / -/--	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 VOL +	 Vol +
 VOL -	 Vol -
 SKIP PREV.	 I<<
 SKIP NEXT	 >>I
 SLOW/SEARCH	 <<
 SLOW/SEARCH	 >>
 STOP	 Stop
 PAUSE	 Pause
 PLAY	 Play
 TOP MENU / DIR. NAV.	 D. Menu
 MENU / PLAY LIST	 Menu
 UP	 Up
 LEFT	 Left





Original		Replacement	
	ENTER		Ok
	RIGHT		Right
	DOWN		Down
	DISPLAY / TV VOL-		Info
	DISPLAY / TV VOL-	+	Shift + Vol -
	RETURN / TV	+	Shift + Vol +
	RETURN / TV		Back
	SUBWOOFER		3D
	SFC		Green
	C. FOCUS	+	Shift + 1
	SUPER SRND.		Format
	DOLBY PL. II		Dual
	Mix 2CH	+	Shift + Subt
	C. S. M.		Red
	POSITION		Pre Ch
	AUDIO	+	Shift + Dual
	ZOOM		Eject

Original		Replacement	
	SETUP		Options
	MUTING		Mute
	FL DISPLAY	+	Shift + Info
	PAGE	+	Shift + 2
	GROUP	+	Shift + 3
	REPEAT		Text
	PLAY MODE	+	Shift + Play
	TEST		Yellow
	CH. SELECT		List
	QUICK REPLAY		Blue
	SUBTITLE		Subt












 














 

 
 
 

 
 
 
 





 


Original	Replacement
Power	Power
Power AV	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥10 / -/-	GUIDE Guide
Tv/AV	AV AV
CH+	Ch +
CH-	Ch -
Tv Vol+	Vol +

Original	Replacement
Tv Vol-	Vol -





Original		Replacement	
	Power		Power
	Power AV		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	=10 / -/-		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>

Original		Replacement	
	Pause		Pause
	Play		Play
	Stop		Stop

