


 







 

 





 

 

 
 
 











| Original   | Replacement   |
|--|---|
|  VHS/DVD Power            |  Power   |
|  Direct TV Rec            |  Subt    |
|  VHS/DVD                  |  Smart   |
|  1                        |  1       |
|  2                        |  2       |
|  3                        |  3       |
|  4                        |  4       |
|  5                        |  5       |
|  6                        |  6       |
|  7                       |  7      |
|  8                      |  8     |
|  9                      |  9     |
|  0                      |  0     |
|  Cancel / Reset         |  Exit  |
|  Input Select           |  Guide |
|  CH+ / Tracking/V-Lock+ |  Ch +  |
|  CH- / Tracking/V-Lock- |  Ch -  |

| Original  | Replacement   |
|---|---|
|  Create Chapter              |  TV/R    |
|  I<< Skip                    |  I<<     |
|  Skip >>I                    |  >>I     |
|  REW / << Slow/Search        |  <<      |
|  FF / Slow/Search            |  >>      |
|  Stop                        |  Stop    |
|  Pause                       |  Pause   |
|  Play                        |  Play    |
|  Direct Navigator / Top Menu |  D. Menu |
|  Functions                  |  List   |
|  Up                        |  Up    |
|  Left                      |  Left  |
|  Enter                     |  Ok    |
|  Right                     |  Right |
|  Down                      |  Down  |
|  Sub Menu                  |  Menu  |
|  Return                    |  Back  |







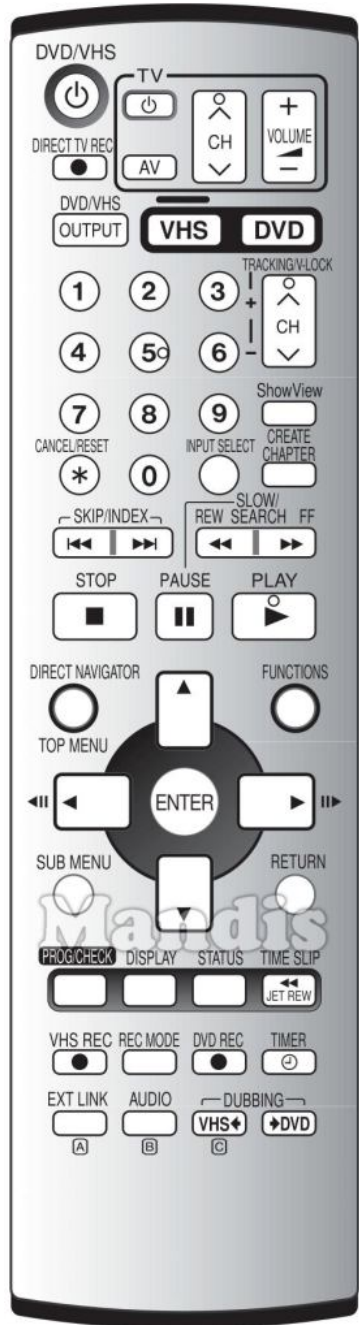

|  | Original               | Replacement |       | Original | Replacement |  |            |
|--|------------------------|-------------|-------|----------|-------------|--|------------|
|  | VHS/DVD Power          |             | Power |          | ShowView    |  | Media      |
|  | Direct TV Rec          |             | Subt  |          | I<< Index   |  | I<<        |
|  | VHS/DVD                |             | Smart |          | Index >>I   |  | >>I        |
|  | 1                      |             | 1     |          | REW         |  | <<         |
|  | 2                      |             | 2     |          | FF          |  | >>         |
|  | 3                      |             | 3     |          | Stop        |  | Stop       |
|  | 4                      |             | 4     |          | Pause       |  | Pause      |
|  | 5                      |             | 5     |          | Play        |  | Play       |
|  | 6                      |             | 6     |          | Up          |  | Up         |
|  | 7                      |             | 7     |          | Left        |  | Left       |
|  | 8                      |             | 8     |          | Enter       |  | Ok         |
|  | 9                      |             | 9     |          | Right       |  | Right      |
|  | 0                      |             | 0     |          | Down        |  | Down       |
|  | Cancel / Reset         |             | Exit  |          | Return      |  | Back       |
|  | Input Select           |             | AV    |          | Prog/Check  |  | Sleep      |
|  | CH+ / Tracking/V-Lock+ |             | Ch +  |          | Display     |  | Info       |
|  | CH- / Tracking/V-Lock- |             | Ch -  |          | Jet Rew     |  | Shift + << |



