


 

 
 
 

 



 

 







 
 
 
 
 
 
 

 






Original	Replacement
 Power	 Power
 Mute	 Mute
 [<>]	 Format
 ♪	 Dual
 []	 3D
 PAT	 Smart
 PIP Sel	 Play
 PIP Pos	 Pause
 PIP Size	 Stop
 AV	 AV
 PC	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Original	Replacement
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Zoom	 Eject
 Swap	 Pre Ch
 Swap	 Back
 PR-	 Ch -
 PR+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Freeze	 Ok





Original	Replacement	Original	Replacement
	 Info		
	 Menu		
	 Options		
	 D. Menu		
	 Subt		
	 Red		
	 Green		
	 Yellow		
	 Blue		
	 Text		
	 Exit		
	 Guide		

