











 



























 



 



 





 

 

 

 





 

 

 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 Freeze	 Shift + Pause / Step /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Fav+	 Shift + Right
 Fav	 Fav / Marker / PC
 Fav-	 Shift + Left
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Info	 Info / Angle
 Input	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 CH+	 CH+ / Page+	 TV/Radio	 TV/Radio /
 P.Mode	 Picture / Format	 T-Shift	 Smart / List
 Vol+	 Vol+	 Rec	 Rec / Rec Mode
 CH-	 CH- / Page-	 EPG	 Guide / EPG / -/-
 S.Mode	 Sound / Title		
 Vol-	 Vol-		
 Play/Pause / Text	 Play / Slow		
 Play/Pause / Text	 Pause / Step / Freeze		
 Play/Pause / Text	 Text / Goto		
 << / Index	 << / Tune-		
 >> / Mix	 >> / Tune+		
 Stop / Reveal	 Stop / Hold		
 I<< / Hold	 Shift + Stop /		
 I<< / Hold	 I<< / Preset-		
 >>I / Subpage	 >>I / Preset+		
 Sub-T	 Subtitle / EQ		
 Cancel	 Shift + Exit / Cancel / Clear		

