
 








 




 




 


 



 


 
 
 



 


 





 



 

 



 




	Original	Replacement		Original	Replacement
	Power		Power		Info/[≡i]
	Mute		Mute		Vol +
	1		1		Vol -
	2		2		Ch +
	3		3		Ch -
	4		4		Menu
	5		5		Exit
	6		6		Recall
	7		7		Home
	8		8		≡
	9		9		Internet
	0		0		Up
	Back		Back		Down
	Audio		Dual		Right
	Source		AV		Left
	List		List		Ok
	EPG		Guide		Radio/Audio+
					Info
					Vol +
					Vol -
					Ch +
					Ch -
					Menu
					Exit
					Pre Ch
					Shift + Smart
					Shift + Media
					Media
					Up
					Down
					Right
					Left
					Ok
					TV/R





Original	Replacement	Original	Replacement
Smart Tv	Smart	[≡]	Text
On/Off Mouse	Eject	[≡+]	Shift + Subt
Timeshift/Audio-	Shift + TV/R	[≡?]	Options
Sleep/Zoom+	Sleep	[≡◇]/[+]	Format
FAV/Zoom-	D. Menu	[≡x]	3D
Red	Red	[≡o]/Subtitle	Subt
Green	Green	Index	Shift + Info
Yellow	Yellow		
Blue	Blue		
<<	<<		
>>	>>		
I<	I<<		
>I	>>I		
Play	Play		
Pause	Pause		
Stop	Stop		
Rec	Rec		

