























Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		<<		<< / Tune-
	PPV		TV/Radio /		Left		Left
	Opciones		Setup / OPT /		OK		OK
	Video Club		Subtitle / EQ		Play		Play / Slow
	Menu		Menu / Home		Pause		Pause / Step / Freeze
	Guia		Guide / EPG / -/--		Right		Right
	Idiomas		Audio / Lang I/II		>>		>> / Tune+
	Herramientas		Smart / List		PRG-		CH- / Page-
	Tv/Salir		Exit / Cancel / Clear		Down		Down
	?/Ayuda		Fav / Marker / PC		Stop		Stop / Hold
	Atras		Back / Return		Red		Red / Netflix / Search
	B-		Display / Media		Gray		Zoom / Size
	Info		Info / Angle		Green		Green / APP / Repeat
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	Up		Up		Blue		Blue / Prime Video / Random
	PRG+		CH+ / Page+		1		1





Original	Replacement	Original	Replacement
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		

