 






 



 
 

 
 


 
 
 











 


 
 


 
 

 
 


 


 
 
 






 
 






Original		Replacement		Original		Replacement	
	Standby		Power		TV / Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Record		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	Subtitle		Subt		Media		Media





Original	Replacement	Original	Replacement
 USB	 Smart		
 I<< Prev	 I<<		
 Next >>I	 >>I		
 Play	 Play		
 Pause	 Pause		
 << Rew	 <<		
 Fwd >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Replacement	Original	Replacement

