

















 



 

 













Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Pic Mode		Picture / Format
	S.Mode		Sound / Title

Original	Replacement	Original	Replacement
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	DNR		Setup / OPT /
	MTS		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
FAV	Fav / Marker / PC
Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Play/Pause / Size	Play / Slow
Play/Pause / Size	Shift + Zoom /
Play/Pause / Size	Pause / Step / Freeze
Stop / Reveal	Stop / Hold
EPG	Guide / EPG / --
Info	Info / Angle
I<< / Text	Text / Goto
I<< / Text	I<< / Preset-
>>I / Index	>>I / Preset+
<< / Subpage	<< / Tune-
>> / Hold	Shift + Stop /

Hold

Original	Replacement
>> / Hold	>> / Tune+

