











 












 



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 PIC.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Timeshift	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Rec.List	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		I<< / Preset-
	Blue / Prime Video / Random		>>I / Preset+
	Shift + Picture / Format		<< / Tune-
	TV/Radio /		>> / Tune+
	Sleep / Timer		
	Subtitle / EQ		
	Info / Angle		
	Setup / OPT /		
	Audio / Lang I/II		
	Display / Media		
	Text / Goto		
	Zoom / Size		
	Play / Slow		
	Eject / Surround		
	Pause / Step / Freeze		
	Shift + Stop /		
	Stop / Hold		

