

 
 
 









 

 

 

 

 

 

 

 

 

 

 

 

 





Original		Replacement		Original		Replacement	
	Power		Power		S.Mode		Sound / Title
	Mute		Mute / Dimmer		CH+		CH+ / Page+
	1		1		CH-		CH- / Page-
	2		2		Source		AV / Input / RDS
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		Exit		Exit / Cancel / Clear
	8		8		Down		Down
	9		9		Menu		Menu / Home
	0		0		Rec		Rec / Rec Mode
	CH.List		Smart / List		Timeshift		Display / Media
	Recall		Back / Return		Timer		Shift + Sleep / Timer
	Vol+		Vol+		Rec.List		Shift + Rec / Rec Mode
	Vol-		Vol-		Red/DVD Setup		Red / Netflix / Search
	PIC.Mode		Picture / Format		Green/Repeat		Green / APP / Repeat





Original	Replacement
 Yellow/Languag	 Yellow / YouTube / Repeat
 Blue/DVD Menu	 Blue / Prime Video / Random
 Title/Aspect	 Guide / EPG / -/--
 Zoom/Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Prog/Index	 D.Menu / Top
 A-B/Reveal	 Setup / OPT /
 Step/Audio	 Audio / Lang I/II
 Info/Display	 Info / Angle
 Text	 Text / Goto
 Eject	 Eject / Surround
 Size	 Zoom / Size
 Play	 Play / Slow
 Subpage	 Fav / Marker / PC
 Pause	 Pause / Step / Freeze
 Hold	 Shift + Stop / Hold

Hold

Original	Replacement
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

