




























 












 


	Original	Replacement		Original	Replacement
			Power		Power
			Mute		Mute
			Pic Size		Format
			Pic Mode		Shift + Format
			Sleep		Sleep
			Dual I-II		Dual
			S.Mode		Shift + Dual
			Still		Pause
			1		1
			2		2
			3		3
			4		4
			5		5
			6		6
			7		7
			8		8
			9		9
			0		0
			-/--		Guide
			PRE-CH		Pre Ch
			S.Swap		I<<
			PIP		Options
			P.Input		>>
			P.Position		>>I
			P.Size		Subt
			P.Swap		<<
			TV		TV/R
			PC/HDMI		Media
			AV/Sel		Smart
			Source		AV
			Menu		Menu
			Exit		Exit
			TTX/On		Text
			Mix		Shift + Text





Original	Replacement
 Up	 Up
 PR+	 Ch +
 Down	 Down
 PR-	 Ch -
 Right	 Right
 Vol+	 Vol +
 Left	 Left
 Vol-	 Vol -
 Enter	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Store	 Shift + Smart
 Flof/List	 List
 Hold	 Stop
 Cancel	 Back

Original	Replacement
 Index	 Info
 Time	 Shift + AV
 Size	 Eject
 Reveal	 D. Menu

