

















 














 





 

 
 













	Original	Replacement		Original	Replacement	
		Mute		Mute / Dimmer		CH+ / Page+
		EPG		Guide / EPG / -/--		Up
		Info		Info / Angle		0
		DVB/AV		AV / Input / RDS		Audio / Lang I/II
		Pause		Pause / Step / Freeze		Vol-
		1		1		Left / Vol-
		2		2		OK
		3		3		Vol+
		Fav		Fav / Marker / PC		Right
		4		4		TTX
		5		5		Menu
		6		6		Down / CH-
		TV/Radio		TV/Radio /		Down
		7		7		Exit / Cancel / Clear
		8		8		Subtitle
		9		9		Red / Netflix / Search
		Recall		Back / Return		Red / Function
						Smart / List



