




 






 


 
 





| Original | Replacement |
|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Auto |  Smart / List |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Display |  Display / Media |
|  Nicam |  Setup / OPT / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

| Original | Replacement |
|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  +/- |  Shift + Guide / EPG / +/- |
|  Recall |  Back / Return |
|  LCD Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Input |  AV / Input / RDS |
|  Sleep |  Sleep / Timer |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  CH- |  CH- / Page- |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |
|  Text |  Text / Goto |
|  Hold |  Stop / Hold |



