

 

 





Original	Replacement	Original	Replacement
	Power		CEC
	1		Smart / List
	2		D.Menu / Top
	3		Exit / Cancel / Clear
	4		Menu / Home
	5		Up
	6		Back / Return
	7		Left
	8		OK
	9		Right
	FAV		Down
	0		Guide
	Red		Tools
	Green		Vol+
	Yellow		Source
	Blue		PR+
			Vol-
			Mute
			Mute / Dimmer





	Original	Replacement	Original	Replacement
	PR-	 CH- / Page-		
	I<	 I<< / Preset-		
	>I	 >>I / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	[<>]	 Picture / Format		
	Dialog	 Audio / Lang I/II		
	[...]	 Subtitle / EQ		
	Tv/Radio	 TV/Radio /		
	My Media	 Display / Media		

