



Original	Replacement	Original	Replacement
Power On	Power	Up	Up
Muting	Mute / Dimmer	Left	Left
Play	Play / Slow	Enter	OK
Pause	Pause / Step / Freeze	Right	Right
Stop	Stop / Hold	Exit/Return	Exit / Cancel / Clear
Rec	Rec / Rec Mode	Down	Down
<<	<< / Tune-	Vol+	Vol+
>>	>> / Tune+	Multi CH	Smart / List
I<<	I<< / Preset-	CH+	CH+ / Page+
>>I	>>I / Preset+	Vol-	Vol-
Tap	Sound / Title	Display/DVD	Display / Media
Eject	Eject / Surround	CH-	CH- / Page-
PH	Picture / Format	1/Stereo	1
Sleep	Sleep / Timer	DVD	2
2/Direct	D.Menu / Top	3/DSP>	3
Test/Tv/VCR	Text / Goto	4/Surround	4
OSD Menu	Menu / Home	5/THX	5





Original		Replacement	
	6/DSP<		6
	7/SP A		7
	8/CH Sel		8
	9/Level+		9
	+10/SP B		Guide / EPG / -/-
	0/Dimmer		0
	Power/Standby	+	Shift + Power
	ENT/Level-	+	Shift + Vol-
	PIP V1	+	Shift + 1
	PIP V2	+	Shift + 2
	CD	+	Shift + 3
	PIP V4	+	Shift + 4
	PIP V3	+	Shift + 5
	Tun	+	Shift + 6

Original		Replacement	





Original		Replacement		Original		Replacement	
	Power		Power		1		1
	Display DVD		Display / Media		2		2
	OSD Menu		Menu / Home		3		3
	Enter		OK		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	Exit/Return		Exit / Cancel / Clear		9		9
	I<<		I<< / Preset-		+10		Guide / EPG / -/--
	Play		Play / Slow		0		0
>>I button"/>	>>I		>>I / Preset+		Ent		Shift + OK
<< button"/>	<<		<< / Tune-				
	Stop		Stop / Hold				
>> button"/>	>>		>> / Tune+				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				





Original	Replacement	Original	Replacement
 Track	 Smart / List	 8	 8
 Disc	 Display / Media	 9	 9
 I<<	 I<< / Preset-	 +10	 Guide / EPG / -/--
 Play	 Play / Slow	 0	 0
 >>I	 >>I / Preset+		
 <<	 << / Tune-		
 Stop	 Stop / Hold		
 >>	 >> / Tune+		
 Pause	 Pause / Step / Freeze		
 Eject	 Eject / Surround		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		





Original		Replacement		Original		Replacement	
	Power		Power		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/--
	>>I		>>I / Preset+		Ent		OK
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

