



Original	Replacement	Original	Replacement
On	Power	Input Sel. Tape	Shift + 5
Standby	Shift + Power	9 CD	9
1 CD	1	Input Sel. Tuner	Shift + 6
Input Sel. V1	Shift + 1	+10 / -- / --- CD	Fav / Marker / PC
2 CD	2	0 CD	0
Input Sel. V2	Shift + 0	Zone 2	Guide / EPG / -/-
3 CD	3	Dimmer	Shift + Mute / Dimmer
Input Sel. V3	Shift + 3	Menu	Menu / Home
4 CD	4	Sleep	Sleep / Timer
Input Sel. V4	Shift + 4	CH + / Disc +	CH+ / Page+
5 CD	5	Up	Up
Input Sel. Multi	Shift + Display / Media	Vol +	Vol+
6 CD	6	CH - / Disc -	CH- / Page-
Input Sel. DVD	Shift + 2	Left	Left
7 CD	7	Ener	OK
Input Sel. CD	Shift + 9	Right	Right
8 CD	8	Vol -	Vol-





Original	Replacement	Original	Replacement
	Return / Exit		Back / Return
	Return / Exit	+	Shift + Back / Return
	Down		Down
	Setup		Setup / OPT /
	Display		Display / Media
	Muting		Mute / Dimmer
	I<< CD		I<< / Preset-
	Play CD		Play / Slow
	>>I CD		>>I / Preset+
	<< CD		<< / Tune-
	< DSP	+	Shift + << /
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	>> CD		>> / Tune+
	DSP >	+	Shift + >> /
	SURR		Exit / Cancel / Clear
	All ST		Text / Goto
	Stereo		Audio / Lang I/II
	Repeat CD		Green / APP / Repeat
	Pure A		Sound / Title
	Direct		D.Menu / Top
	Test Tone		Zoom / Size
	CH Sel		Smart / List
	Level -	+	Shift + CH- /
	Level +	+	Shift + CH+ /
	Open / Close CD		Eject / Surround
	L. Night	+	Shift + Sleep / Timer
	Cine FLTR		Picture / Format

