



Original	Replacement	Original	Replacement
On	Power	Muting	Mute / Dimmer
Standby	Shift + Power	Level Down	CH- / Page-
Sleep	Sleep / Timer	Level Up	CH+ / Page+
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
Disc+	Shift + CH+ /	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
Disc-	Shift + CH- /	>>	>> / Tune+
Left	Left	Rec / Random	Rec / Rec Mode
Enter	OK	Pause / Play Rev.	Pause / Step / Freeze
Right	Right	Open / Close	Shift + Eject / Surround
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio	Audio / Lang I/II	Input Sel. V1	1
CH Sel	Smart / List	Input Sel. V2	4
Test	Text / Goto	Input Sel. T1	5





Original		Replacement		Original		Replacement	
T2	Input Sel. T2	8	8				
V3	Input Sel. V3	7	7				
V4	Input Sel. V4	9	9				
TUN	Input Sel. TUN	6	6				
PH	Input Sel. PH	0	0				
1	Stereo	SOUND	Sound / Title				
2	Direct	NETFLIX SEARCH	Red / Netflix / Search				
3	DSP ▶	SHIFT + ▶	Shift + Right				
4	SURR	SURROUND	Eject / Surround				
5	A.ST	APP REPEAT	Green / APP / Repeat				
6	◀ DSP	SHIFT + ◀	Shift + Left				
7	SP A	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
8	SP B	Prime Video RANDOM	Blue / Prime Video / Random				
9	Re-EQ	EQ SUBTITLE	Subtitle / EQ				
10	Display	MEDIA DISPLAY	Display / Media				
0	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer				
SEARCH-ENTER	Zone 2	RDS AV INPUT	AV / Input / RDS				





Original	Replacement	Original	Replacement
	Power		Subtitle / EQ
	+ Shift + Power		I<< / Preset-
	Back / Return		Play / Slow
	Setup / OPT /		>>I / Preset+
	CH+ / Page+		<< / Tune-
	Up		Stop / Hold
	Vol+		>> / Tune+
	CH- / Page-		Blue / Prime Video / Random
	Left		Pause / Step / Freeze
	OK		Eject / Surround
	Right		1
	Vol-		2
	Down		3
	D.Menu / Top		4
	Menu / Home		5
	Mute / Dimmer		6
	Info / Angle		7





Original	Replacement
ON	Power
STDBY	Shift + Power
Disc+	CH+ / Page+
Vol+	Vol+
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2

Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0





Original	Replacement
ON	Power
STDBY	Shift + Power
Vol+	Vol+
Enter	OK
Enter	Fav / Marker / PC
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Rec / Random	Rec / Rec Mode
Rec / Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround

Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0

