













 

 






 































 


























 

 





 










Original	Replacement	Original	Replacement
	ON		Power
	Standby		Shift + Power
	Display		Display / Media
	BD / DVD		2
	VCR / DVR		4
	CBL / SAT		0
	GAME		9
	PC		Fav / Marker / PC
	AUX		7
	TUNER		6
	TV/CD		1
	TV/CD		3
	PHONO		Shift + Fav / Marker / PC
	PORT		Guide / EPG / -/--
	NET		5
	USB		8
	Muting		Mute / Dimmer
	CH+		CH+ / Page+
	Vol+		Vol+
	CH-		CH- / Page-
	Vol-		Vol-
	SP Layout		Info / Angle
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Home		D.Menu / Top
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-







Original	Replacement
 ON	 Power
 Standby	 Shift + Power
 Display	 Display / Media
 BD / DVD	 2
 VCR / DVR	 4
 CBL / SAT	 0
 GAME	 9
 PC	 Fav / Marker / PC
 AUX	 7
 TUNER	 6
 TV/CD	 1
 TV/CD	 3
 PHONO	 Shift + Fav / Marker / PC
 PORT	 Guide / EPG / -/--
 NET	 5
 USB	 8
 Muting	 Mute / Dimmer

Original	Replacement
 CH+ / Album+	 CH+ / Page+
 Vol+	 Vol+
 CH- / Album-	 CH- / Page-
 Vol-	 Vol-
 Top Menu	 Info / Angle
 Up	 Up
 Menu	 Menu / Home
 Left / Playlist/Category-	 Left
 Enter	 OK
 Right / Playlist/Category	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 D.Menu / Top
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 << / Tune-	 << / Tune-



