



Original	Replacement	Original	Replacement
On	Power	Up	Up
Standby	Shift + Power	Muting	Mute / Dimmer
Input Selector V1	1	Left	Left
Input Selector V2	4	Enter	OK
Input Selector V3	7	Right	Right
Input Selector Multi CH	8	Return	Back / Return
Input Selector	2	Down	Down
Input Selector	5	Setup	Setup / OPT /
Input Selector Tuner	6	Pause /<	Pause / Step / Freeze
Input Selector CD	3	Play	Play / Slow
Dimmer	Shift + Mute / Dimmer	Stop	Stop / Hold
Sleep	Sleep / Timer	<< / Tune-	<< / Tune-
CH/Disc+	CH+ / Page+	>> / Tune+	>> / Tune+
Vol+	Vol+	I<< / Preset-	I<< / Preset-
CH/Disc-	CH- / Page-	I>> / Preset+	I>> / Preset+
Vol-	Vol-	List. Mode Stereo	Red / Netflix / Search
SP A/B	Menu / Home	List. Mode	Eject / Surround





Original	Replacement	Original	Replacement
On	Power	Up	Up
Standby	Shift + Power	Menu	Menu / Home
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Return	Back / Return
5	5	Down	Down
6	6	Setup	Setup / OPT /
7	7	Pause	Pause / Step / Freeze
8	8	Play	Play / Slow
9	9	Stop	Stop / Hold
+10	Guide / EPG / -/--	<< / Tune-	
0	0	>> / Tune+	
CLR	Exit / Cancel / Clear	I<< / Preset-	
CH/Disc+	CH+ / Page+	>>I / Preset+	
CH/Disc-	CH- / Page-	Audio	Audio / Lang I/II
Top Menu	D.Menu / Top	Subtitle	Subtitle / EQ



