











 




 










Original		Replacement		Original		Replacement	
	On / Standby		Power		CH/Disc/Album-		CH- / Page-
	Input Selector V1		1		Vol-		Vol-
	Input Selector V2		4		Guide/Top		Guide / EPG / -/-
	Input Selector V3		7		Guide/Top		D.Menu / Top
	Input Selector Multi CH		8		Up		Up
	Input Selector		2		Muting		Mute / Dimmer
	Input Selector		5		Left		Left
	Input Selector Tuner		6		Enter		OK
	Input Selector CD		3		Right		Right
	Dimmer		Shift + Mute / Dimmer		Return		Back / Return
	Sleep		Sleep / Timer		Down		Down
	Power Tv		Shift + Power		Setup		Setup / OPT /
	Vol+ Tv		Shift + Vol+		Pause		Pause / Step / Freeze
	CH/Disc/Album		CH+ / Page+		Play		Play / Slow
	Vol+		Vol+		Stop		Stop / Hold
	Input Tv		Shift + AV / Input / RDS		<<		<< / Tune-
	Vol- Tv		Shift + Vol-		>>		>> / Tune+





Original	Replacement	Original	Replacement
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Listening Mode Stereo	 Subtitle / EQ		
 Listening Mode Surround	 Eject / Surround		
 Listening Mode <	 Sound / Title		
 Listening Mode >	 Audio / Lang I/II		
 Test Tone	 Red / Netflix / Search		
 CH Sel	 Green / APP / Repeat		
 Level-	 Yellow / YouTube / Repeat		
 Level+	 Blue / Prime Video / Random		
 Display	 Display / Media		
 L.Night	 Zoom / Size		
 Cine FLTR	 Picture / Format		





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR	Exit / Cancel / Clear
Top Menu	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home
Previous Menu/Muting	Mute / Dimmer

Original	Replacement
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Shift + Subtitle / EQ
Surround	Shift + Eject / Surround
< Listening Mode	Shift + Sound / Title
Listening Mode >	Shift + Audio / Lang I/II





	Original	Replacement	Original	Replacement
	Audio	 Audio / Lang I/II		
	Subtitle	 Subtitle / EQ		
	Random	 Blue / Prime Video / Random		
	Repeat	 Green / APP / Repeat		
	Display	 Display / Media		
	VCR	 Shift + 4		
	Play Mode VCR	 Picture / Format		
	DVD	 Shift + 2		
	HDD	 Shift + 7		





Original	Replacement	Original	Replacement
	On / Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/10/-/-		Guide / EPG / -/-
	0/11		0
	12		Fav / Marker / PC
	Disc+		CH+ / Page+
	Vol+		Vol+
	Disc-		CH- / Page-
	Vol-		Vol-

Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	I>>		I>> / Preset+
	Stereo		Subtitle / EQ
	Surround		Eject / Surround
	< Listening Mode		Sound / Title
	Listening Mode >		Audio / Lang I/II
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Display		Display / Media





Original		Replacement		Original		Replacement	
	Power		Power		<<		<< / Tune-
	1		1		Stereo		Subtitle / EQ
	2		2		Surround		Eject / Surround
	3		3		< Listening Mode		Sound / Title
	4		4		Listening Mode >		Audio / Lang I/II
	5		5		Play Mode		D.Menu / Top
	6		6		L.Night		Sleep / Timer
	7		7				
	8		8				
	9		9				
	+10/10/-/-		Guide / EPG / -/-				
	0/11		0				
	CH+		CH+ / Page+				
	CH-		CH- / Page-				
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				
	Stop		Stop / Hold				

