



Original	Replacement	Original	Replacement
On	Power	Up	Up
Standby	Shift + Power	Vol +	Vol+
Input Sel. V1	1	CH - / Disc -	CH- / Page-
Input Sel. V2	4	Left	Left
Input Sel. V3	7	Enter	OK
Input Sel. DVD	2	Right	Right
Input Sel. Multi	8	Vol -	Vol-
Input Sel. CD	3	Down	Down
Input Sel. Tape	5	Display	Display / Media
Input Sel. Tuner	6	Return / Exit	Exit / Cancel / Clear
Tone	Play / Slow	Return / Exit	Back / Return
Tone-	<< / Tune-	Setup	Setup / OPT /
Tone+	>> / Tune+	Muting	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer	SURR	Eject / Surround
Menu	Menu / Home	All ST	Subtitle / EQ
Sleep	Sleep / Timer	Stereo	Audio / Lang I/II
CH + / Disc +	CH+ / Page+	Pure A	Picture / Format





Original		Replacement		Original		Replacement	
	Direct		Sound / Title				
	< DSP		<< / Preset-				
	DSP >		>>  / Preset+				
	Test Tone		Red / Netflix / Search				
	CH Sel		Green / APP / Repeat				
	Level -		Yellow / YouTube / Repeat				
	Level +		Blue / Prime Video / Random				
	L. Night		TV/Radio /				
	Cine FLTR		D.Menu / Top				






 


Original	Replacement
On	Power
Standby	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10 / -- / ---	Guide / EPG / - / -
0	0
Clear	Exit / Cancel / Clear
Top Menu	D.Menu / Top
Menu	Menu / Home
Up	Up

Original	Replacement
Vol+	Vol+
Left	Left
Enter	OK
Right	Right
Vol-	Vol-
Down	Down
Display	Display / Media
Return	Back / Return
Setup	Setup / OPT /
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>	>> / Tune+



 



 

 

 



 

 

 
 
 

 

 

 

 



 





Original		Replacement		Original		Replacement	
	<		CH- / Page-				
	>		CH+ / Page+				
	Random		Blue / Prime Video / Random				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Angle		Info / Angle				
	Last M		Fav / Marker / PC				
	Repeat		Green / APP / Repeat				
	A-B		Yellow / YouTube / Repeat				
	Search		Red / Netflix / Search				
	Memory		Smart / List				
	Open / Close		Eject / Surround				
	Video Off		AV / Input / RDS				







Original	Replacement
 On	 Power
 Standby	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10 / --/--	 Guide / EPG / --/--
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-

Original	Replacement
 Play	 Play / Slow
 >>	 >>  / Preset+
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Open / Close	 Eject / Surround

