





 



 



 

 

 

 

 





 








Original	Replacement
 Power	 Power
 Display	 Display / Media
 Dimmer	 Mute / Dimmer
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Search	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 +10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home

Original	Replacement
 Up	 Up
 Top Menu	 D.Menu / Top
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Subtitle On/Off	 TV/Radio /
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 <</FR	 << / Tune-
 >>/FF	 >> / Tune+





	Original	Replacement	Original	Replacement
	I<</Down	 I<< / Preset-		
	>>I/Up	 >>I / Preset+		
	Repeat	 Green / APP / Repeat		
	A-B	 Yellow / YouTube / Repeat		
	<I Slow	 CH- / Page-		
	Slow I>	 CH+ / Page+		
	Memory	 Text / Goto		
	Clear	 Exit / Cancel / Clear		
	Random	 Blue / Prime Video / Random		
	Zoom	 Zoom / Size		

