 

 


 





 



 



 







 



 



 


 









 
 

 

 










Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 i	 ANGLE INFO	 RETURN	 RETURN BACK
 INPUT SELECT	 RDS AV INPUT		 Left
 PICTURE SIZE	 FORMAT PICTURE	 ENTER/ CH LIST	 OK
 1	 TV 1	 ENTER/ CH LIST	 LIST SMART
 2	 DVD 2		 Right
 3	 CD - STB 3		 DIMMER MUTE
 4	 VIDEO 4		 Down
 5	 TAPE 5		 EQ SUBTITLE
 6	 TUNER 6		 + VOL
 7	 AUX - HDD 7		 STEP - FREEZE II
 8	 USB 8		 + CH PAGE
 9	 BLUETOOTH 9		 VOL -
 AUDIO I / II	 LANG I / II AUDIO		 PC FAV MARKER
 0	 HDMI - BAT 0		 - CH PAGE
 GUIDE EPG	 GUIDE EPG		 GOTO TEXT
 MENU	 HOME MENU		 MEDIA DISPLAY





Original	Replacement	Original	Replacement
	Size		Zoom / Size
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

