



Original	Replacement	Original	Replacement
	Eject		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	P/N		Blue / Prime Video / Random
	4		4
	5		5
	6		6
	Mute		Mute / Dimmer
	7		7
	8		8
	9		9
	Vol +		Vol+
	0		0
	10+		Guide / EPG / -/-
	GOTO		Text / Goto
	Vol -		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Step		Pause / Step / Freeze
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	Menu		Menu / Home
	Up		Up
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	Display		Display / Media





	Original	Replacement	Original	Replacement
	 Zoom	 Zoom / Size		
	 Angle	 Info / Angle		
	 Audio	 Audio / Lang I/II		
	 Sub-T	 Subtitle / EQ		
	 Repeat	 Green / APP / Repeat		
	 A-B	 Yellow / YouTube / Repeat		
	 Slow	 Shift + Play /		
	 L/R	 Red / Netflix / Search		
	 Prog	 TV/Radio /		
	 Return	 Back / Return		
	 Video	 Shift + 4		
	 HDMI	 Shift + 0		

