



Original	Replacement	Original	Replacement
	Eject / Surround		Vol-
	Power		<< / Tune-
	1		>> / Tune+
	2		I<< / Preset-
	3		>>I / Preset+
	Blue / Prime Video / Random		Pause / Step / Freeze
	4		Play / Slow
	5		Stop / Hold
	6		Menu / Home
	Mute / Dimmer		Up
	7		Setup / OPT /
	8		Left
	9		OK
	Vol+		Right
	0		Sound / Title
	Guide / EPG / -/--		Down
	Text / Goto		Display / Media





	Original	Replacement	Original	Replacement
	Zoom	Zoom / Size		
	Angle	Info / Angle		
	Audio	Audio / Lang I/II		
	Sub-T	Subtitle / EQ		
	Repeat	Green / APP / Repeat		
	A-B	Yellow / YouTube / Repeat		
	Slow	Shift + Play /		
	L/R	Red / Netflix / Search		
	Prog	TV/Radio /		
	Return	Back / Return		
	Video	Shift + 4		
	HDMI	Shift + 0		

