

 











 











 









 













 













 











 
















 





Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Video	 Shift + 4	 10+	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 Goto	 Text / Goto
 Open / Close	 Eject / Surround	 <<	 << / Tune-
 USB	 Shift + 8	 Vol -	 Vol-
 Prog	 TV/Radio /	 Vol +	 Vol+
 Mark	 Fav / Marker / PC	 I<<	 I<< / Preset-
 Clear	 Exit / Cancel / Clear	 Play / Pause	 Play / Slow
 1	 1	 Stop	 Stop / Hold
 2	 2	 >>	 >> / Tune+
 3	 3	 Repeat	 Green / APP / Repeat
 4	 4	 A-B	 Yellow / YouTube / Repeat
 5	 5	 >>I	 >>I / Preset+
 6	 6	 Menu / Ripping	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Setup	 Setup / OPT /
 9	 9	 Left	 Left





Original	Replacement	Original	Replacement
	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	OSD		Display / Media
	Zoom		Zoom / Size
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	Step		Pause / Step / Freeze
	Slow	 + 	Shift + Play /
	Return		Back / Return
	Default		D.Menu / Top

