



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 i	 Info / Angle
 Pause	 Pause / Step / Freeze	 Left	 Left
 Stop	 Stop / Hold	 OK	 OK
 Rec	 Rec / Rec Mode	 Right	 Right
 <<	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>	 >> / Tune+	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 Source (Games)	 Eject / Surround	 Vol+	 Vol+
 Movie-Music-Phot	 Picture / Format	 World (Violet)	 Smart / List
 [≡]..	 Zoom / Size	 PR+	 CH+ / Page+
 */O	 Sleep / Timer	 Vol-	 Vol-
 TV	 TV/Radio /	 */Q	 Display / Media
 Q.Menu	 D.Menu / Top	 PR-	 CH- / Page-
 [-O-]	 Setup / OPT /	 1	 1
 [≡]/Text	 Text / Goto	 2	 2





Original		Replacement		Original	Replacement
3 def	3	CO- STB 3	3		
4 ghi	4	VIDEO 4	4		
5 jkl	5	TAPE 5	5		
6 mno	6	TUNER 6	6		
7 pqrs	7	AUX- HDD 7	7		
8 tuv	8	USB 8	8		
9 wxyz	9	BLUETOOTH 9	9		
TV Guide	Guide	GUIDE EPG	Guide / EPG / -/--		
0	0	HDMI - BAT 0	0		
Red	Red	NETFLIX SEARCH	Red / Netflix / Search		
Green	Green	APP REPEAT	Green / APP / Repeat		
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random		
Recall	Recall	SHIFT + RETURN BACK	Shift + Back / Return		

