



Original	Replacement	Original	Replacement
Power	Power	--	Guide / EPG / -/--
Up / P+	Up	0	0
Up / P+	CH+ / Page+	P < P	Fav / Marker / PC
Menu	Menu / Home	PP	Back / Return
Left	Left	Vol+	Vol+
Right	Right	I-II	Audio / Lang I/II
Down / P-	Down	Mute	Mute / Dimmer
Down / P-	CH- / Page-	Vol-	Vol-
1	1	Info	Info / Angle
2	2	Red	Red / Netflix / Search
3	3	Green	Green / APP / Repeat
4	4	Yellow	Yellow / YouTube / Repeat
5	5	Blue	Blue / Prime Video / Random
6	6	[TV]	Shift + 1
7	7	[TV]	TV/Radio /
8	8	[AV]	AV / Input / RDS
9	9	[ ≡ ]	Text / Goto





	Original	Replacement	Original	Replacement
	[≡⊕]	Subtitle / EQ		
	[ /≡]	Picture / Format		
	[≡X]	Exit / Cancel / Clear		
	[≡↕]	Zoom / Size		
	[≡?]	Display / Media		
	[≡i]	Smart / List		






 






 




Original	Replacement	Original	Replacement
	Power		Power
	Up / P+		Up
	Up / P+		CH+ / Page+
	Menu		Menu / Home
	Left		Left
	Select		OK
	Right		Right
	Down / P-		CH- / Page-
	Down / P-		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Repeat		Green / APP / Repeat
	Search		Red / Netflix / Search
	A→B		Yellow / YouTube / Repeat
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Prog		TV/Radio /
	C		Blue / Prime Video / Random
	Angle		Info / Angle
	Return		Back / Return
	Time		Sleep / Timer
	<<		<< / Tune-
	>>		>> / Tune+







































	Original	Replacement		Original	Replacement
			<< / Preset-		
			>>  / Preset+		
			Play / Slow		
			Pause / Step / Freeze		
			Stop / Hold		
	Title		Sound / Title		
	Open / Close		Eject / Surround		











Original	Replacement	Original	Replacement
On/Off	 Power		
Mute	 Mute / Dimmer		
Txt Stop	 Stop / Hold		
Tone+	 >> / Tune+		
Lang	 Sound / Title		
Menu audio	 Audio / Lang I/II		
Subt.List	 Subtitle / EQ		
Txt Expand	 Zoom / Size		
Sleep Timer	 Sleep / Timer		
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Menu	 Menu / Home		
Menu Up	 Up		
Info	 Info / Angle		
Menu Left	 Left		
OK Enter	 OK		

Original	Replacement	Original	Replacement
Menu Right	 Right		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Display	 Display / Media		
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		





Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Lang	 Shift + Audio / Lang I/II		

Original	Replacement	Original	Replacement

