




 
 

 











 


 



 
 

 







Original	Replacement	Original	Replacement
	Power		Red / Netflix / Search
	Menu		Green / APP / Repeat
	3D		Yellow / YouTube / Repeat
	TV Input		Blue / Prime Video / Random
	AV Input		Mute / Dimmer
	i		Text / Goto
	Exit		Subtitle / EQ
	Viera Tools		[+]/Aspect
	Internet		Vol+
	Up		CH+ / Page+
	Guide		Vol-
	Left		CH- / Page-
	OK		1
	Right		2
	Option		3
	Down		4
	Back/Return		5





Original	Replacement
	6
	7
	8
	9
	Eject / Surround
	0
	Fav / Marker / PC
	<< / Tune-
	Play / Slow
	>> / Tune+
	I<< / Preset-
	Pause / Step / Freeze
	>>I / Preset+
	Stop / Hold
	Rec / Rec Mode

Original	Replacement

