




 






 



 













 
 
 

 




Original	Replacement	Original	Replacement
	Power		Netflix
	Select Drive		Media
	1		I<< Skip
	2		I>>
	3		Skip >>I
	4		<<
	5		>>
	6		Stop
	7		Pause
	8		Play
	9		Rec
	0		Info
	Last View		X/Exit
	Radio/Tv		Video Menu
	CH/Page+		Guide
	CH/Page-		Function Menu
	Internet		Option
			Return
			Up





Original	Replacement
	Down
	Right
	Left
	Ok
	Red
	Green
	Yellow
	Blue
	+ Shift + Rec
	TEXT Text
	SUBT Subt
	SLEEP Sleep
	FORMAT Format
	3D 3D
	DUAL Dual
	AV AV
	Eject

Original	Replacement
	+ Shift + Left
	+ Shift + Right
	+ Shift + Power
	+ Shift + AV
	Vol +
	Vol -
	+ Shift + Ch +
	+ Shift + Ch -

