 

 

 
 
 

 



 
 


 

 
 
 
 
 

 
 
 
 
 
 












 

 

 
 
 





 


 
 



 
 
 
 


 
 









 




 


 
 

 

 
 




Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Time/Play	 Format	 0	 0
 Clock/Timer	 AV	 +10	 Pre Ch
 Dimmer	 Media	 DEL	 D. Menu
 Auto Off	 Blue	 Program	 Shift + Sleep
 Sleep	 Sleep	 Repeat	 Text
 Vol+	 Vol +	 Play Mode	 Shift + Play
 Vol-	 Vol -	 USB Play/Pause	 Pause
 Mute	 Mute	 CD Play/Pause	 Play
 1	 1	 AUX	 Green
 2	 2	 I<</<<	 <<
 3	 3	 Radio	 TV/R
 4	 4	 >>/>>I	 >>
 5	 5	 Stop	 Stop
 6	 6	 Re-Master	 Back
 7	 7	 D.Bass	 Exit
 8	 8	 Display	 Info





Original		Replacement		Original		Replacement	
	Surround		Dual				
	Bass		Subt				
	Preset EQ		Options				
	Treble		Smart				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Auto Preset		Guide				
	Tune Mode		Red				
	FM Mode		Yellow				
	Input Level		3D				

