



Original	Replacement
 POWER	 Power
 TV	 Shift + 1
 VCR / AUX	 Shift + 7
 VCR / AUX	 Shift + 4
 SLEEP	 Sleep / Timer
 TV / AV	 AV / Input / RDS
 TUNER / BAND	 Shift + 6
 DVD / CD	 Shift + 3
 DVD / CD	 Shift + 2
 1	 1
 2	 2
 3	 3
 CH +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH -	 CH- / Page-

Original	Replacement
 7	 7
 8	 8
 9	 9
 VOL +	 Vol+
 Cancel	 Exit / Cancel / Clear
 0	 0
 ≧10 / -/-	 Guide / EPG / -/-
 VOL -	 Vol-
 SKIP PREV.	 I<< / Preset-
 SKIP NEXT	 >>I / Preset+
 SLOW/SEARCH	 << / Tune-
 SLOW/SEARCH	 >> / Tune+
 STOP	 Stop / Hold
 PAUSE	 Pause / Step / Freeze
 PLAY	 Play / Slow
 TOP MENU / DIR. NAV.	 D.Menu / Top
 UP	 Up





Original	Replacement
MENU / PLAY LIST	Menu / Home
LEFT	Left
ENTER	OK
RIGHT	Right
DISPLAY / TV VOL-	Display / Media
DISPLAY / TV VOL-	Shift + Vol-
DOWN	Down
RETURN / TV	Back / Return
RETURN / TV	Shift + Vol+
SUBWOOFER	Shift + Subtitle / EQ
SFC	Blue / Prime Video / Random
C. FOCUS	TV/Radio /
SUPER SRND.	Eject / Surround
DOLBY PL. II	Sound / Title
Mix 2CH	Picture / Format
C. S. M.	Red / Netflix / Search
POSITION	Yellow / YouTube / Repeat

Original	Replacement
AUDIO	Audio / Lang I/II
ZOOM	Zoom / Size
SETUP	Setup / OPT /
MUTING	Mute / Dimmer
FL DISPLAY	Shift + Display / Media
PAGE	Shift + CH+ /
GROUP	Shift + CH- /
REPEAT	Green / APP / Repeat
PLAY MODE	Info / Angle
TEST	Text / Goto
CH. SELECT	Smart / List
QUICK REPLAY	Shift + OK
SUBTITLE	Subtitle / EQ



MEMORY



























 















Original	Replacement
	Power
	Power
	Shift + Power
	AV / Input / RDS
	1
	2
	3
	CH+ / Page+
	4
	5
	6
	CH- / Page-
	7
	8
	9
	0
	Guide / EPG / -/-
	Vol-

Original	Replacement
	Vol+





Original	Replacement
	 Shift + Power
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/-
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

Original	Replacement
	 Stop / Hold
	 Pause / Step / Freeze
	 Play / Slow

