




 







































 



 



 





 






 







 

 






 
















Original	Replacement	Original	Replacement
	Power		Power
	[+]		Info
	Tv/AV		AV
	Mute		Mute
	^		Ch +
	v		Ch -
	Vol+		Vol +
	Vol-		Vol -
	V		Ok
	V+		Right
	V-		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Timer		Shift + AV
	N		Media
	Menu		Menu
	Mood Light		Format
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Power VCR		Shift + Power
	Audio Out VCR		Dual
	^ VCR		Up
	v VCR		Down





Original	Replacement	Original	Replacement
 Stop	 Stop	 [≡↓]	 Exit
 Pause	 Pause	 [∴]	 Subt
 II>	 Back		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Tv/TXT	 Text		
 F.P.	 Pre Ch		
 [/≡]	 Options		
 [≡ ←]	 Eject		
 [≡?]	 TV/R		
 [≡◇]	 3D		
 [≡i]	 List		
 [≡+]	 D. Menu		
 [≡o]	 Smart		
 [≡x]	 Sleep		

