



Original	Replacement
Power	Power
Audio	Audio / Lang I/II
VHS/DVD	Smart / List
1	1
2	2
3	3
CH+	CH+ / Page+
4	4
5	5
6	6
CH-	CH- / Page-
7	7
8	8
9	9
Cancel / Reset	Exit / Cancel / Clear
0	0
-/-- / >=10	Guide / EPG / -/--

Original	Replacement
Repeat	Green / APP / Repeat
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
REW / << Slow/Search	<< / Tune-
FF / Slow/Search	>> / Tune+
Stop	Stop / Hold
Pause / Slow	Pause / Step / Freeze
Play	Play / Slow
Direct Navigator / Top Menu	D.Menu / Top
Up	Up
Play List / Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down
Exit / Return	Back / Return





Original		Replacement		Original		Replacement	
	AV		AV / Input / RDS				
	P.Memory		Fav / Marker / PC				
	Play Mode		Eject / Surround				
	Setup		Setup / OPT /				
	Timer		Sleep / Timer				
	Music with Picture		Sound / Title				
	Rec Check		Rec / Rec Mode				
	Group		Vol-				
	A / Zoom		Zoom / Size				
	B / Quick Replay		Picture / Format				
	Dubbing		Subtitle / EQ				



 



 

 





 





 


 






Original	Replacement
VHS/DVD Power	Power
Audio	Audio / Lang I/II
VHS/DVD	Smart / List
1	1
2	2
3	3
CH+ / Tracking/V-Lock+	CH+ / Page+
4	4
5	5
6	6
CH- / Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Input	AV / Input / RDS
Cancel / Reset	Exit / Cancel / Clear
0	0

Original	Replacement
-/-- / >=10	Guide / EPG / -/--
ShowView	D.Menu / Top
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
REW	<< / Tune-
FF	>> / Tune+
Stop	Stop / Hold
Pause / Slow	Pause / Step / Freeze
Play	Play / Slow
Prog Play	Text / Goto
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down
















Original	Replacement	Original	Replacement
 Exit / Return	 Back / Return		
 Prog/Check	 Shift + TV/Radio / Program		
 I-Timer	 Shift + Sleep / Timer		
 Off Timer	 Subtitle / EQ		
 Rec Mode	 Shift + Rec / Rec Mode		
 Timer	 Sleep / Timer		
 Music with Picture	 Sound / Title		
 Rec. Check	 TV/Radio /		
 Rec	 Rec / Rec Mode		
 Jet Rew	 Shift + << /		
 A / Ext Link	 Red / Netflix / Search		
 B / AV Link	 Shift + AV / Input / RDS		
 Dubbing	 Eject / Surround		

Original	Replacement	Original	Replacement





	Original	Replacement	Original	Replacement
	Power			
	AV			
	Volume+			
	Volume-			
	CH+			
	CH-	