 









 

 



 



 







 

 

 







 















 
 




 









Original		Replacement		Original		Replacement	
	VTR		Power		2		2
	Clock/Counter		Yellow / YouTube / Repeat		3		3
	Reset		Exit / Cancel / Clear		Time Search		Blue / Prime Video / Random
	Memory/Repeat/Search		Green / APP / Repeat		4		4
	Audio Out		Mute / Dimmer		5		5
	Rev.Play		Eject / Surround		6		6
	Rec		Rec / Rec Mode		Monitor		Display / Media
	Pause/Still		Pause / Step / Freeze		7		7
	Stop		Stop / Hold		8		8
	Still Adv		>>I / Preset+		9		9
	<<		<< / Tune-		Remain		Smart / List
	Play		Play / Slow		0/AV		0
	>>		>> / Tune+		0/AV		AV / Input / RDS
	Search -		CH- / Page-		-/--		Guide / EPG / -/--
	Search		Red / Netflix / Search		Index		Info / Angle
	Search +		CH+ / Page+		Write		Menu / Home
	1		1		Erase		Back / Return

