




 


 



 



 



 









 















 

 

 

 

 

 

 

 

 

 

 



 

 

 

 

 

 
 

 
 



Original	Replacement	Original	Replacement
	Power		Power
	HDD/Music Collection		Red / Netflix / Search
	DVD		Shift + 2
	Tuner		Shift + 6
	Power Tv		Shift + Power
	TV/AV Tv		Shift + AV / Input / RDS
	Vol+ Tv		Shift + Right
	Vol- Tv		Shift + Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Exit / Cancel / Clear
	+10/-/--		Guide / EPG / -/--
	Select >		CH+ / Page+
	< Select		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow Search		<< / Tune-
	Slow Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Menu/Play List		Menu / Home
	Functions		Info / Angle
	Sub Menu		Subtitle / EQ





Original	Replacement
 Return	 Back / Return
 Top Menu/Disc Navigator	 Smart / List
 One Touch Play	 Display / Media
 Start	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Play Energetic	 Shift + 1
 Play Mellow	 Shift + Play /
 Play Relaxing	 Shift + 3
 Play Emotional	 Shift + 4
 HDD Rec	 Rec / Rec Mode
 CH Select	 Picture / Format
 REG/Favourite	 Fav / Marker / PC
 Quick OSD	 Text / Goto

Original	Replacement
 Play Mode	 Zoom / Size
 FL Display	 TV/Radio /
 Sleep	 Sleep / Timer
 [I]VS	 Shift + TV/Radio / Program
 Setup	 Setup / OPT /
 Sound	 Sound / Title
 Select	 Shift + OK
 Muting	 Mute / Dimmer

