



Original	Replacement
Power	Power
Guide	Guide / EPG / -/--
Input Tv	TV/Radio /
Input AV	AV / Input / RDS
Menu	Menu / Home
Text	Text / Goto
STTL/AD	Subtitle / EQ
Aspect	Picture / Format
Info	Info / Angle
Exit	Exit / Cancel / Clear
Netflix	Shift + Red / Netflix /
Home	Shift + Menu /
APPS	Shift + Green / APP /
Option	Setup / OPT /
Return	Back / Return
Up	Up
Down	Down

Original	Replacement
Right	Right
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
CH+	CH+ / Page+
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5





Original		Replacement	
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Fav / Marker / PC
	Hexa Boost		Sound / Title
	<</ <<		<< / Tune-
	Play		Play / Slow
	>>/>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Off Timer		Sleep / Timer
	My APP		Smart / List
	e-Help		Audio / Lang I/II

Original	Replacement

