
 

 





Original	Replacement	Original	Replacement
	Power		8
	Power Tv		9
	Vol+ Tv		FPlay
	CH+ Tv		Last View
	Drive Select		0
	Input AV Tv		NET
	Vol- Tv		Netflix
	CH- Tv		I<< Skip
	1		Skip >>I
	2		<< Slow/Search
	3		Slow/Search >>
	Page/CH+		Stop
	4		Pause
	5		Play
	6		i/Status
	Page/CH-		Exit
	7		Guide
	Power		8
	Shift + Power		9
	Vol+		Shift + Green / APP /
	Shift + CH+ /		Fav / Marker / PC
	Smart / List		0
	Shift + AV / Input / RDS		Display / Media
	Vol-		Shift + Red / Netflix /
	Shift + CH- /		I<< / Preset-
	1		>>I / Preset+
	2		<< / Tune-
	3		>> / Tune+
	CH+ / Page+		Stop / Hold
	4		Pause / Step / Freeze
	5		Play / Slow
	6		Info / Angle
	CH- / Page-		Exit / Cancel / Clear
	7		Guide / EPG / -/-





Original	Replacement
Video Menu	D.Menu / Top
Left	Left
OK	OK
Up	Up
Right	Right
Function Menu	Menu / Home
Down	Down
Back/Return	Back / Return
Option	Setup / OPT /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Text	Text / Goto
STTL	Subtitle / EQ

Original	Replacement
Prog/Check	Shift + TV/Radio / Program
Chapter	Picture / Format
Delete	AV / Input / RDS
Radio/TV	TV/Radio /
AD	Audio / Lang I/II
Time Slip	Sleep / Timer
-10s Manual Skip	Shift + Left
+60s Manual Skip	Shift + Right

