



	Original	Replacement
	Power	Power
	Vol+	Vol+
	CH+	CH+ / Page+
	Vol-	Vol-
	CH-	CH- / Page-
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	-/--	Guide / EPG / -/--
	A	Red / Netflix / Search

	Original	Replacement
	B	Green / APP / Repeat
	C	Yellow / YouTube / Repeat
	D	Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	Power		Power		Cancel		Exit / Cancel / Clear
	ShowView		Shift + Display / Media		0		0
	AV		AV / Input / RDS		Vol-		Vol-
	Direct Tv Rec		TV/Radio /		I<< Skip		I<< / Preset-
	Rec		Rec / Rec Mode		Skip >>I		>>I / Preset+
	1		1		<<< Slow/Search		<<< / Tune-
	2		2		Slow/Search >>>		>>> / Tune+
	3		3		Stop		Stop / Hold
	CH+		CH+ / Page+		Pause		Pause / Step / Freeze
	4		4		Play/x1.3		Play / Slow
	5		5		Top Menu/Direct Navigator		D.Menu / Top
	6		6		Up		Up
	CH-		CH- / Page-		Menu/Play List		Menu / Home
	7		7		Left		Left
	8		8		Enter		OK
	9		9		Right		Right
	Vol+		Vol+				







Original	Replacement
Functions	Setup / OPT /
Down	Down
Return	Back / Return
Prog/Check	+  Shift + Fav / Marker / PC
Timer	Sleep / Timer
Manual Skip	Smart / List
Time Slip	+  Shift + Sleep / Timer
F.Rec	Red / Netflix / Search
Rec Mode	+  Shift + Rec / Rec Mode
< Frame	+  Shift + << /
Frame  >	+  Shift + >> /
A/Input Select	Yellow / YouTube / Repeat
B/Status	+  Shift + AV / Input / RDS
C/AV Link	Picture / Format
D/Display	Display / Media
Erase	Text / Goto
Audio	Audio / Lang I/II

Original	Replacement
Position	+  Shift + Smart / List
Marker	Fav / Marker / PC

