


 


| Original | Replacement |
|---|---|
|  Power |  Power |
|  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Source |  AV / Input / RDS |
|  0 |  0 |
|  O)/I-II/Audio |  Audio / Lang I/II |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |

| Original | Replacement |
|--|--|
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  CH+ |  CH+ / Page+ |
|  Index |  Display / Media |
|  Vol+ |  Vol+ |
|  CH- |  CH- / Page- |
|  List |  Smart / List |
|  Vol- |  Vol- |
|  ♥ |  Fav / Marker / PC |
|  Sleep |  Sleep / Timer |
|  EPG |  Guide / EPG / -/- |
|  Recall |  Back / Return |
|  Red |  Red / Netflix / Search |
|  << |  << / Tune- |









 

















| Original | Replacement | Original | Replacement |
|---|-------------------------------------|----------|-------------|
|  | Green Green / APP / Repeat | | |
|  | >> >> / Tune+ | | |
|  | Yellow Yellow / YouTube / Repeat | | |
|  | l<< l<< / Preset- | | |
|  | Blue Blue / Prime Video / Random | | |
|  | >>l >>l / Preset+ | | |
|  | [≡] Text / Goto | | |
|  | Play Play / Slow | | |
|  | Pause Pause / Step / Freeze | | |
|  | [≡+] Zoom / Size | | |
|  | Stop/Still Stop / Hold | | |
|  | Radio TV/Radio / | | |
|  | [≡◆]/[++] Setup / OPT / | | |
|  | [≡x] Picture / Format | | |
|  | [≡o]/Subtitle Subtitle / EQ | | |
|  | DMP D.Menu / Top | | |
|  | Rec Rec / Rec Mode | | |





| Original | Replacement |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Text / Play/Pause |  Play / Slow |
|  Text / Play/Pause |  Pause / Step / Freeze |
|  Stop / Still |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  Audio I/II |  Audio / Lang I/II |
|  Subtitle / [≡o] |  Subtitle / EQ |
|  [≡x] |  Picture / Format |
|  Size / Aspect |  Zoom / Size |
|  Sleep |  Sleep / Timer |
|  Radio |  TV/Radio / |
|  DMP |  D.Menu / Top |
|  Source |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Info |  Info / Angle |

| Original | Replacement |
|--|---|
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Recall |  Back / Return |
|  Vol + |  Vol+ |
|  List |  Smart / List |
|  CH + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Index |  Display / Media |
|  CH - |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |





| Original | Replacement | Original | Replacement |
|-------------------|-----------------------------|----------|-------------|
| 6 | 6 | | |
| 7 | 7 | | |
| 8 | 8 | | |
| 9 | 9 | | |
| EPG | Guide / EPG / -/-- | | |
| 0 | 0 | | |
| Fav | Fav / Marker / PC | | |
| Red / << | Red / Netflix / Search | | |
| Green / >> | Green / APP / Repeat | | |
| Yellow / << | Yellow / YouTube / Repeat | | |
| Blue / >> | Blue / Prime Video / Random | | |
| Text / Play/Pause | Shift + Play / | | |
| Red / << | Shift + Red / Netflix / | | |
| Green / >> | Shift + Green / APP / | | |
| Yellow / << | Shift + Yellow / YouTube / | | |
| Blue / >> | Shift + Blue / Prime / | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

