


 
 

 

 

 

 




 

 

 
 
 

 

 



 
 

 






Original	Replacement
 Power CD	 Power
 Power USB	 +  Shift + Power
 Power Tuner	 Media
 Power Tape	 Smart
 CD	 1
 USB	 2
 Tuner	 3
 Tape	 4
 Timer	 D. Menu
 AUX	 5
 Clock	 +  Shift + AV
 Sleep	 Sleep
 DSC	 Menu
 DBB	 Info
 Prog	 +  Shift + Sleep
 Prog USB	 TV/R
 Prog Tuner	 Dual

Original	Replacement
 Prog Tape	 Format
 Display	 +  Shift + Info
 Play/Pause CD	 Ok
 Play/Pause USB	 Play
 Play Tape	 Red
 Up	 Up
 Up USB	 +  Shift + Up
 Up Tuner	 Guide
 Up Tape	 Text
 Down	 Down
 Down USB	 +  Shift + Down
 Down Tuner	 Pre Ch
 Down Tape	 AV
 >>I CD	 Right
 >>I USB	 >>I
 >>I Tuner	 +  Shift + Right
 >>I Tape	 Blue





Original	Replacement	Original	Replacement
	 Left		
	 I<<		
	 +  Shift + Left		
	 Yellow		
	 +  Shift + Text		
	 Ch +		
	 Ch -		
	 +  Shift + Ch -		
	 Vol +		
	 Vol -		
	 Stop		
	 +  Shift + Stop		
	 Rec		
	 Green		
	 Mute		

