 





| Original | Replacement |
|---|---|
|  Power |  Power |
|  Ambilight |  Display / Media |
|  List |  Smart / List |
|  Tv Guide |  Guide / EPG / -/-- |
|  Voice |  Audio / Lang I/II |
|  Top Pics |  Picture / Format |
|  Sources |  AV / Input / RDS |
|  [∴] |  D.Menu / Top |
|  Exit/TV |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  Up |  Up |
|  Options |  Setup / OPT / |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |

| Original | Replacement |
|---|---|
|  Home |  Menu / Home |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Vol+ |  Vol+ |
|  Netflix |  Shift + Red / Netflix / |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |



