







 






 


 


 



Original	Replacement
 Power	 Power
 Disc	 Media
 Subtitle	 Subt
 Angle	 TV/R
 Zoom	 Eject
 Audio	 Dual
 Disc Menu	 D. Menu
 Setup	 Options
 Return/Title	 Back
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play

Original	Replacement
 >>I	 >>I
 Pause	 Pause
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep




 
 

 

 
 
 








 
 
 
 



Original		Replacement		Original		Replacement	
	Repeat		Text				
	Surr.		Red				
	Sound	 + 	Shift + Dual				
	Vocal		Yellow				
	Karaoke		Blue				






 

 





 
 

 
 

 
 
 
 



Original	Replacement
 Power	 Power
 Tuner	 Media
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Surr.	 Red
 Sound	 Dual





 
 
 

 

 
 
 

 

 




 

 
 
 
Original	Replacement
 Power	 Power
 TV	 Media
 Setup	 Options
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Mute	 Mute
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Surr.	 Red
 Sound	 Dual





Original	Replacement
 Power	 Power
 AUX/DI	 Media
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Surr.	 Red
 Sound	 Dual

