


















 





 

 




	Original	Replacement	Original	Replacement
	USB	 D		
	CD	 C		
	Tuner	 B		
	AUX	 A		
	Open/Close	 ZOOM		
	Power			
	Vol+	 + VOL		
	Vol-	 VOL -		
	Clock/Display	 DISPLAY INFO		
	Timer	 TIMER AV		
	Sleep	 PROG SLEEP		
	DBB	 SOUND DUAL		
	DSC	 AD SUBT		
	RDS/News	 SEARCH TV/R		
	Mute	 MUTE		

