 
 




 




 
 





 



 





 

 






 




 


Original	Replacement
 Standby - On	 Power
 DVD	 Smart
 VCR	 Media
 Open / Close	 Eject
 Title	 Info
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back

Original	Replacement
 Display	 Shift + Info
 Thumbnail	 3D
 List / Disc Menu	 D. Menu
 List / Disc Menu	 List
 System Menu	 Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Enter	 Ok
 Stop	 Stop
 Play	 Play
 << REW	 <<
 >> FWD	 >>
 Search	 TV/R
 I< Prev	 I<<
 >I Next	 >>I

 

 

 
 
 



 

 

 
 
 
 
 

 
 
 

 

 

 




 



 

 


 


 








 




 
 



Original	Replacement	Original	Replacement
 Pause / Step	 Pause		
 D. Dubbing	 Dual		
 Timer	 Shift + AV		
 Rec Mode	 Shift + Rec		
 Rec	 Rec		
 Chap. Add	 Text		
 Marker	 Pre Ch		
 Clear	 Exit		
 Child Lock	 Shift + Ok		
 Subtitle	 Subt		
 Audio	 Shift + Dual		
 Zoom	 Shift + Eject		
 Angle	 Format		
 Repeat	 Shift + Text		
 Repeat A-B	 Shift + TV/R		
 Shuffle	 Sleep		
 Showview Video	 Options		





Original	Replacement
 Standby - On	 Power
 DVD	 Smart
 VCR	 Media
 Mode	 D. Menu
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV
 Display	 Info

Original	Replacement
 System Menu	 Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK / Enter	 Ok
 Stop	 Stop
 Play	 Play
 << REW	 <<
 >> FWD	 >>
 Pause / Step	 Pause
 Rec	 Rec
 Clear	 Exit
 Child Lock	 Shift + Ok

