




 


 


 









 


 



 
















 



 


 
 

 

 














Original		Replacement		Original		Replacement	
	Power		Power		Rec		Rec
	Info		Info		Red		Red
	Search		TV/R		Green		Green
	Sources		AV		Yellow		Yellow
	Up		Up		Blue		Blue
	Down		Down		Vol+		Vol +
	Right		Right		Vol-		Vol -
	Left		Left		Mute		Mute
	OK		Ok		Netflix		Shift + Media
	←		Pre Ch		Windows		Media
	Home		Smart		Rakuten Tv		Shift + Smart
	≡		Dual		CH+		Ch +
	<<		<<		CH-		Ch -
	Play		Play		Exit/TV		Exit
	>>		>>		1		1
	Stop		Stop		2		2
	Pause		Pause		3		3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	List/Tv Guide		Guide				

