

 
 
 




 

 
 








 












 
 



 











 

 





 
 




 






Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute
	Red/Disc		Red		Stop/Open/Clos		Stop
	Green/Dock for		Green		Play		Play
	Yellow/Help		Yellow		Pause		Pause
	Blue/Source		Blue		I<		I<<
	Pop Up Menu/Disc Menu		Menu		<<		<<
	Home		Smart		>>		>>
	Sound Settings		Dual		>I		>>I
	Back		Back		1		1
	Options		Options		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6
	OK		Ok		7		7
	Vol+		Vol +		8		8
	Vol-		Vol -		9		9





Original		Replacement		Original		Replacement	
	0		0				
	Subtitle		Subt				
	Top Menu	 + 	Shift + Menu				

