 


 

 

 



 

 

 

 

 



 



 
 












 

 
 

 





 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	Tuner		Red
	AUX		Green
	Tape		Yellow
	USB		Blue
	CD1		1
	CD2		2
	CD3		3
	USB Record		Rec
	USB Delete		Exit
	Vol-		Vol -
	Vol+		Vol +
	I</Title		I<<
	>I/Title		>>I
	Stop		Stop
	Play/Pause		Play
	Play/Pause		Pause
	<</Album		<<
	>>/Album		>>
	DSC		Up
	IS		Left
	RDS/News		Right
	DIM		Down
	Prog		Shift + Sleep
	Repeat		Text
	Shuffle		TV/R
	Display		Info
	Sleep		Sleep
	Clock Timer		Shift + AV
	Timer On/Off		AV
	Mute		Mute
	DBB		Media
	Max		Smart

