







Original	Replacement
	 Power
	 3
	 6
	 5
	 7
	 +  Shift + Sleep / Timer
	 Sleep / Timer
	 Vol-
	 Vol+
	 I<< / Preset-
	 >>I / Preset+
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+
	 Smart / List

Original	Replacement
	 Display / Media
	 Mute / Dimmer





Original	Replacement
	Power
	CD 3
	Tuner 6
	Tape 5
	AUX 7
	Picture / Format
	Shift + Sleep / Timer
	Sleep / Timer
	Vol-
	Vol+
	I<< / Preset-
	>>I / Preset+
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+

Original	Replacement
	Smart / List
	Display / Media
	Mute / Dimmer
	CH- / Page-
	CH+ / Page+





