
































 








Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Picture / Format
	 Shift + Green / APP / REPEAT
	 Menu / Home
	 Guide / EPG / -/--
	 Shift + Smart / List
	 AV / Input / RDS
	 Smart / List
	 Shift + Menu / Home
	 Exit / Cancel / Clear
	 Shift + Red / Netflix / Search

Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle
	 Setup / OPT /
	 Back / Return
	 Display / Media
	 Up
	 Down
	 Left
	 Right
	 OK
	 Vol+
	 Vol-
	 Red / Netflix / Search
	 Mute / Dimmer
	 CH+ / Page+





	Original	Replacement		Original	Replacement
	CH-	CH- / Page-			
	1	1			
	2	2			
	3	3			
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	0	0			
	Subtitle	Subtitle / EQ			
	Text	Text / Goto			

	Original	Replacement		Original	Replacement

